



**Hygipod**  
Installation Guide



## **Thank you...**

...for choosing our range of Hygipods.

Please follow the instructions in this guide to ensure that your products are installed to a high standard and will give you many years of service.

If you require any further assistance or advice,  
please call our technical department on

**01707 254 170**

# Contents

<b>TOOLS REQUIRED .....</b>	<b>4</b>
<b>HYGIPOD – Double Return.....</b>	<b>5</b>
Positioning:.....	5
Plinth: .....	6
Hygipod Installation: .....	7
Sanitaryware Installation: .....	8
Multiple Hygipods: .....	9
<b>HYGIPOD – Single Return.....</b>	<b>10</b>
Positioning:.....	10
Plinth: .....	11
Hygipod Installation: .....	12
Sanitaryware Installation: .....	13
Multiple Hygipods: .....	14
<b>NOTES .....</b>	<b>15</b>


## TOOLS REQUIRED

- Hammer drill
- Cordless screwdriver
- Hammer
- 1,200 mm (4ft) level
- Tape measure
- Square
- Pozi screwdriver no. 2
- Sharp pencil
- Packers (for leveling plinth if floor is uneven)
- Fittings (supplied)

# HYGIPOD – Double Return

## Positioning:


1. Refer to relevant drawings to determine the location of the Hygipod, and accurately mark the width of the unit on the wall.




# Plinth:

If no plinth is being used, continue to Pod Installation on page 7.

1. Assemble plinth.
  - a. If using an exposed plinth, place the plinth in position against the wall, centrally on the vertical marks.
  - b. If using a plinth for covered vinyl flooring, assemble the plinth as shown by setting the sides into the rebate on the front section.

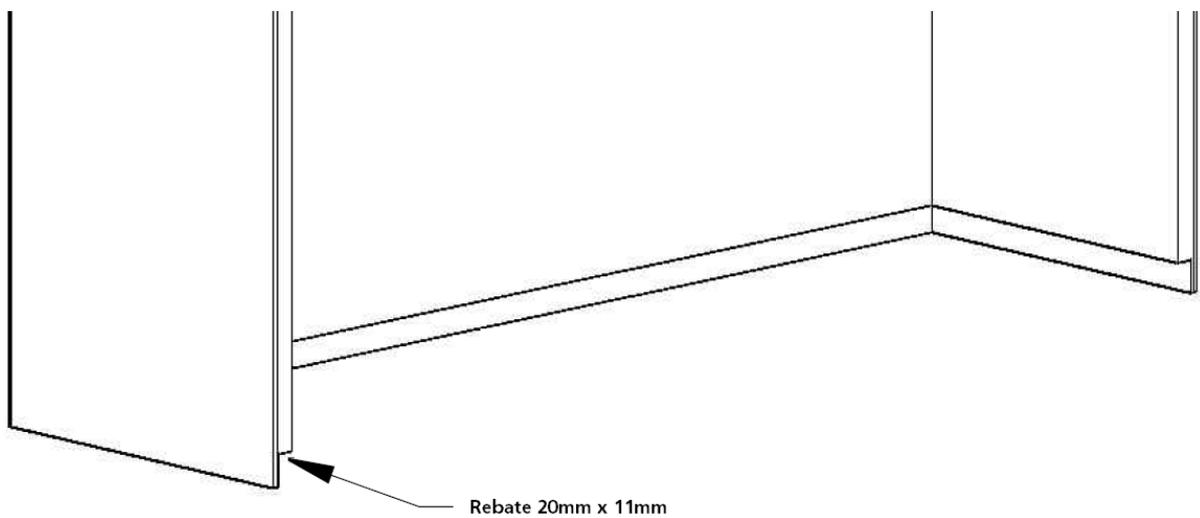


2. Fix the plinth to the floor and wall using the brackets supplied, ensuring that the top of the plinth is level (if multiple Hygipods are being installed, continuous plinth may be supplied, to be cut to length on site).

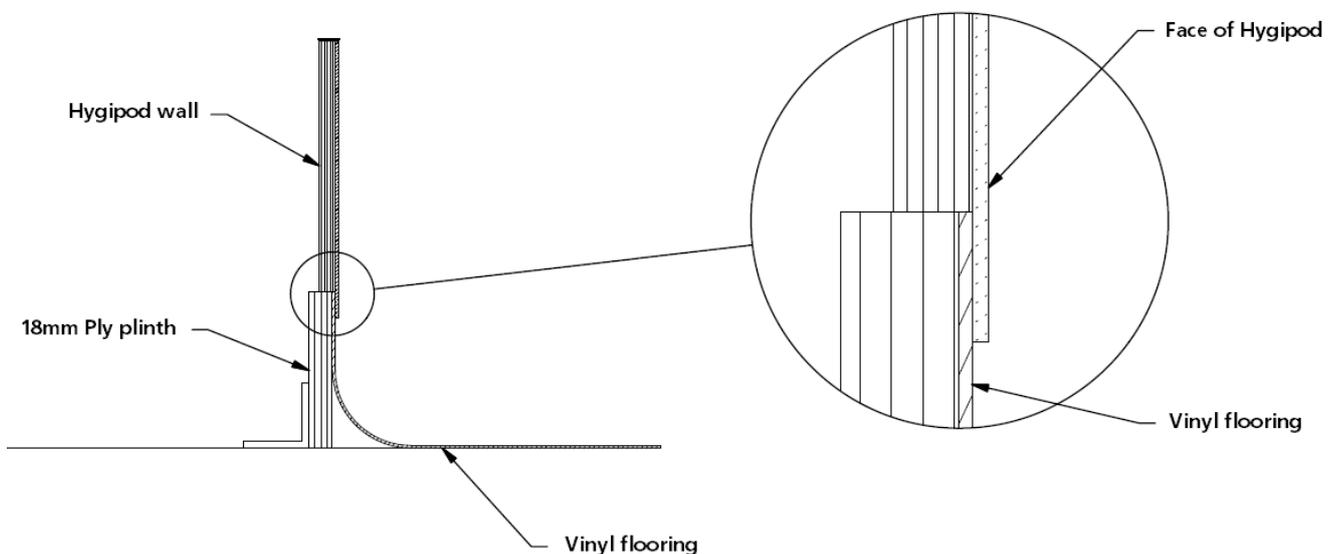

3. If vinyl flooring is to be covered to the plinth, this should be installed at this stage.

# Hygipod Installation:

1. Using two people, carefully lift the Hygipod from the pallet, and place onto the plinth (or directly on floor if no plinth).
2. Check that the Hygipod is vertical, and lines up with the setting out marks.
3. Using the key supplied, open the upper access hatch whilst supporting the Hygipod, and check that the brackets are evenly spaced and accessible. Brackets can be repositioned as necessary.
4. Mark the positions of the upper four bracket fixing holes onto the wall.
5. Close and lock the upper access hatch with the key.
6. Open the lower access hatch, check and mark the positions of the lower four bracket fixing holes onto the wall.
11. Close and lock the lower access hatch with the square key.
12. Carefully remove the Hygipod from the wall and set aside with access to the rear of the Hygipod.
13. Create suitable fixings in the wall (drill and plug masonry or provide pattresses behind plasterboard).
14. Fix the brackets accurately to the wall in the locations marked.
15. Reposition the Hygipod against the wall and ensure that the brackets sit neatly inside the Hygipod.
16. Ensure the Hygipod is pushed back against the wall at each bracket location and re-fix brackets to the Hygipod using the screws provided


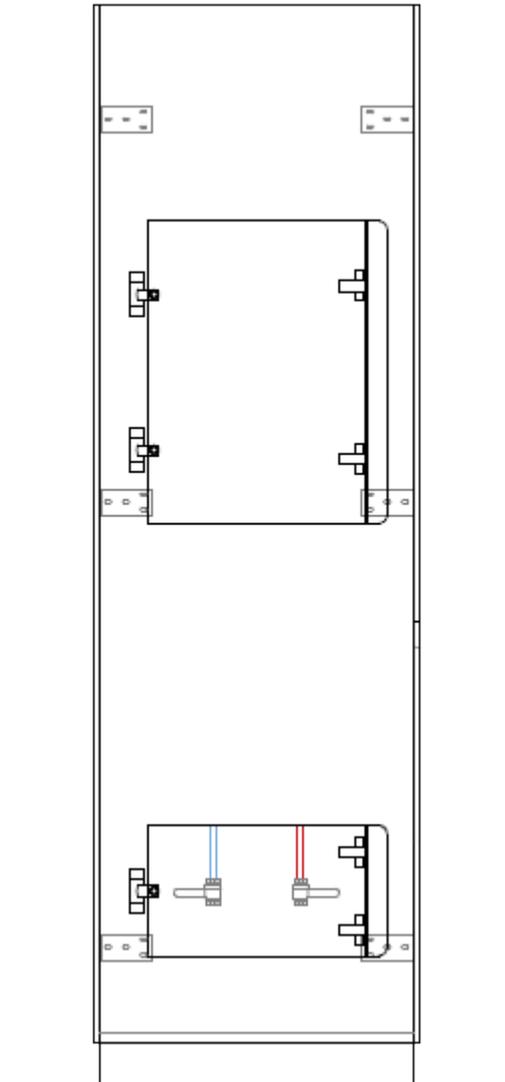


## Sanitaryware Installation:

1. Remove the protective film from the basin area, and peel away from rear edges where the Hygipod meets the wall.
2. Check that basin brackets are ready to receive the basin and mount the basin.
3. Secure the basin to the Hygipod (for example, this could be by tightening the wingnuts on the M6 studding inside the Hygipod, dependent on the basin type).
4. Fit basin spout and tap handle as necessary (dependent on tap type).
5. Connect hot and cold supplies to feeds and connect waste to soil pipework via trap supplied. Test.
6. Check alignment and clearance of access hatches and adjust as necessary using the adjustment screws on each hinge.
7. Apply bead of neutral cure silicone sealant where the Hygipod meets the wall and around the basin.
8. When commissioning is complete, remove remaining protective film.

## Multiple Hygipods:

1. For multiple Hygipods forming a range, follow the steps above for the adjacent Hygipod, then peel back the protective film on the sides, to prevent this becoming trapped and secure each Hygipod to the next one with screws near the front face. A clearance hole should be drilled through one Hygipod, to ensure that the adjacent units are pulled tight together.

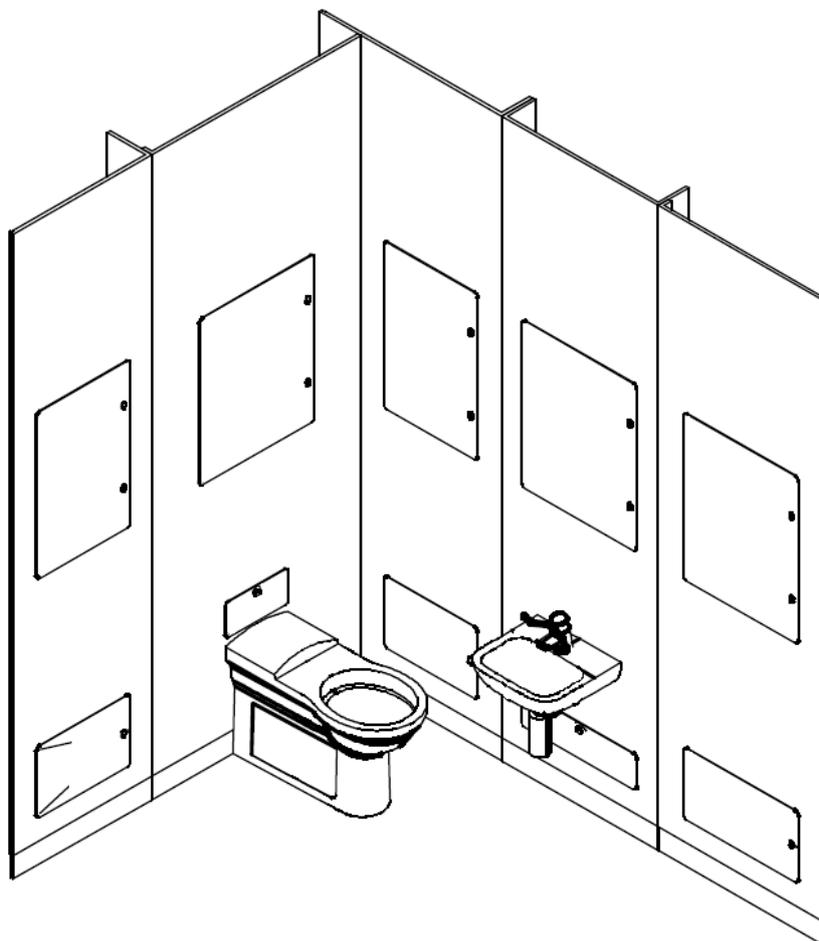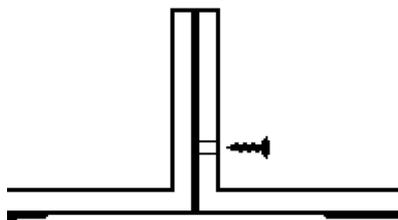


2. If you encounter any difficulty, please contact our Technical Department on 01707 254 170 with the job number and room reference, and one of the team will be pleased to assist.

# HYGIPOD – Single Return

## Positioning:


1. Refer to relevant drawings to determine the location of the Hygipod, and accurately mark the width of the unit on the wall.




# Plinth:

If no plinth is being used, continue to Pod Installation on page 12.

1. Assemble plinth.
  - a. If using an exposed plinth, place the plinth in position against the wall, centrally on the vertical marks.
  - b. If using a plinth for covered vinyl flooring, assemble the plinth as shown by setting the sides into the rebate on the front section.

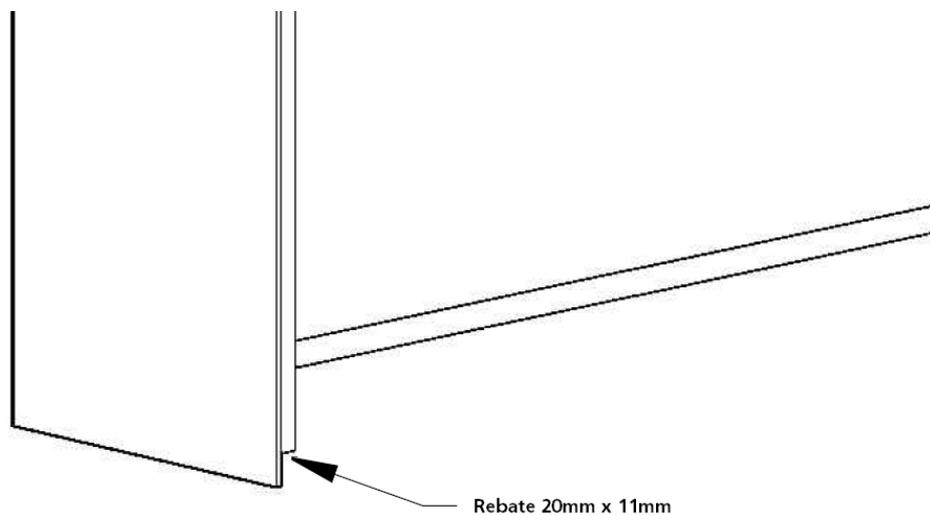


2. Fix the plinth to the floor and wall using the brackets supplied, ensuring that the top of the plinth is level (if multiple Hygipods are being installed, continuous plinth may be supplied, to be cut to length on site).

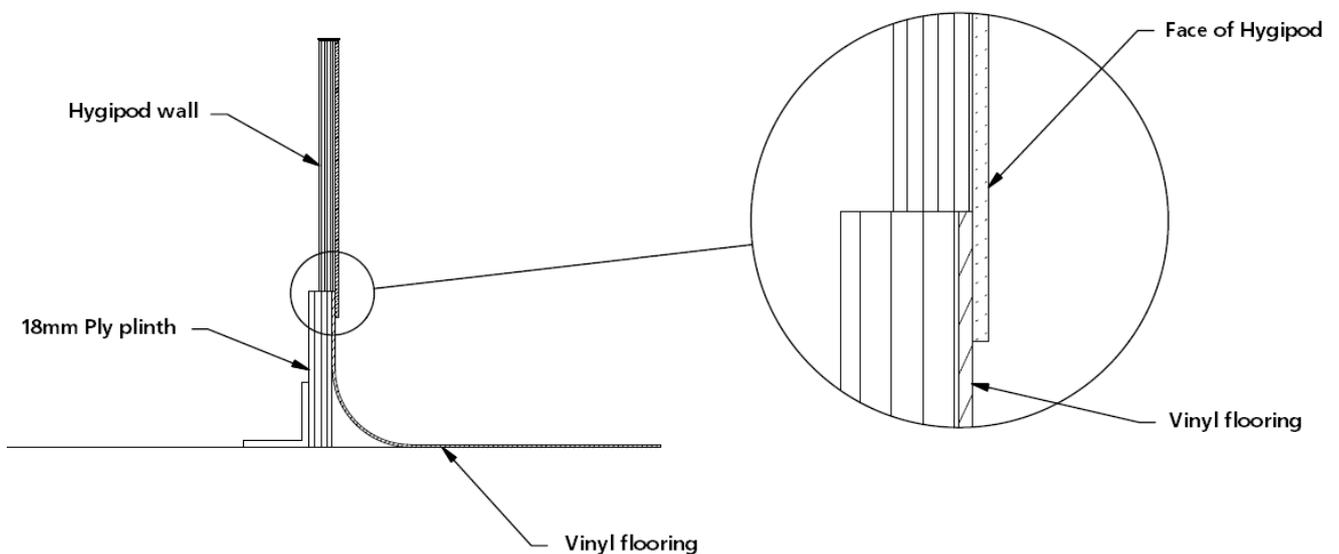

3. If vinyl flooring is to be covered to the plinth, this should be installed at this stage.

# Hygipod Installation:

1. Using two people, carefully lift the Hygipod from the pallet, and place onto the plinth (or directly on floor if no plinth).
2. Check that the Hygipod is vertical, and lines up with the setting out marks.
3. Using the key supplied, open the upper access hatch whilst supporting the Hygipod, and check that the brackets are evenly spaced and accessible. Brackets can be repositioned as necessary.
4. Mark the positions of the upper four bracket fixing holes onto the wall.
5. Close and lock the upper access hatch with the key.
6. Open the lower access hatch, check and mark the positions of the lower four bracket fixing holes onto the wall.
11. Close and lock the lower access hatch with the square key.
12. Carefully remove the Hygipod from the wall and set aside with access to the rear of the Hygipod.
13. Create suitable fixings in the wall (drill and plug masonry or provide pattresses behind plasterboard).
14. Fix the brackets accurately to the wall in the locations marked.
15. Reposition the Hygipod against the wall and ensure that the brackets sit neatly inside the Hygipod.
16. Ensure the Hygipod is pushed back against the wall at each bracket location and re-fix brackets to the Hygipod using the screws provided


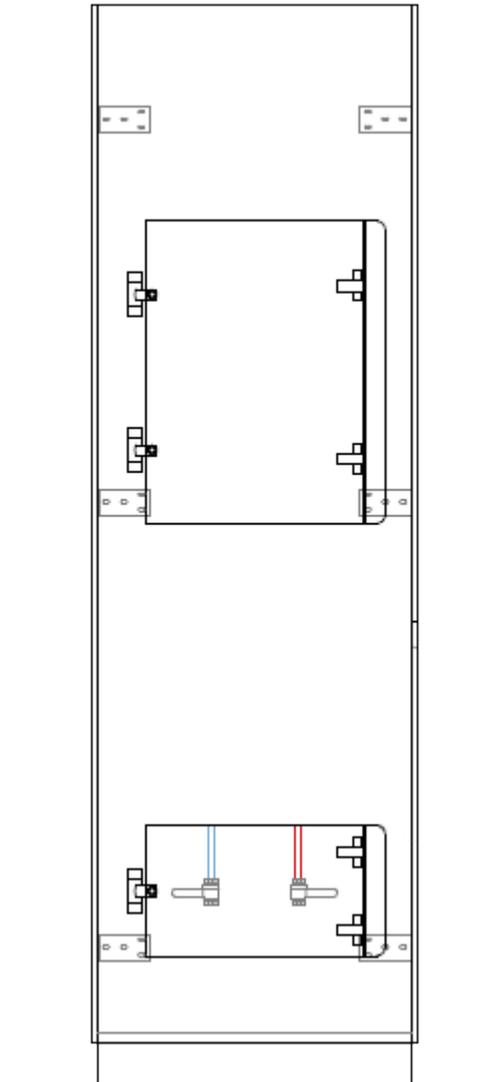


## Sanitaryware Installation:

1. Remove the protective film from the basin area, and peel away from rear edges where the Hygipod meets the wall.
2. Check that basin brackets are ready to receive the basin and mount the basin.
3. Secure the basin to the Hygipod (for example, this could be by tightening the wingnuts on the M6 studding inside the Hygipod, dependent on the basin type).
4. Fit basin spout and tap handle as necessary (dependent on tap type).
5. Connect hot and cold supplies to feeds and connect waste to soil pipework via trap supplied. Test.
6. Check alignment and clearance of access hatches and adjust as necessary using the adjustment screws on each hinge.
7. Apply bead of neutral cure silicone sealant where the Hygipod meets the wall and around the basin.
8. When commissioning is complete, remove remaining protective film.

## Multiple Hygipods:

1. For multiple Hygipods forming a range, follow the steps above for the adjacent Hygipod, then peel back the protective film on the sides, to prevent this becoming trapped and secure each Hygipod to the next one with screws near the front face. A clearance hole should be drilled through one Hygipod, to ensure that the adjacent units are pulled tight together.

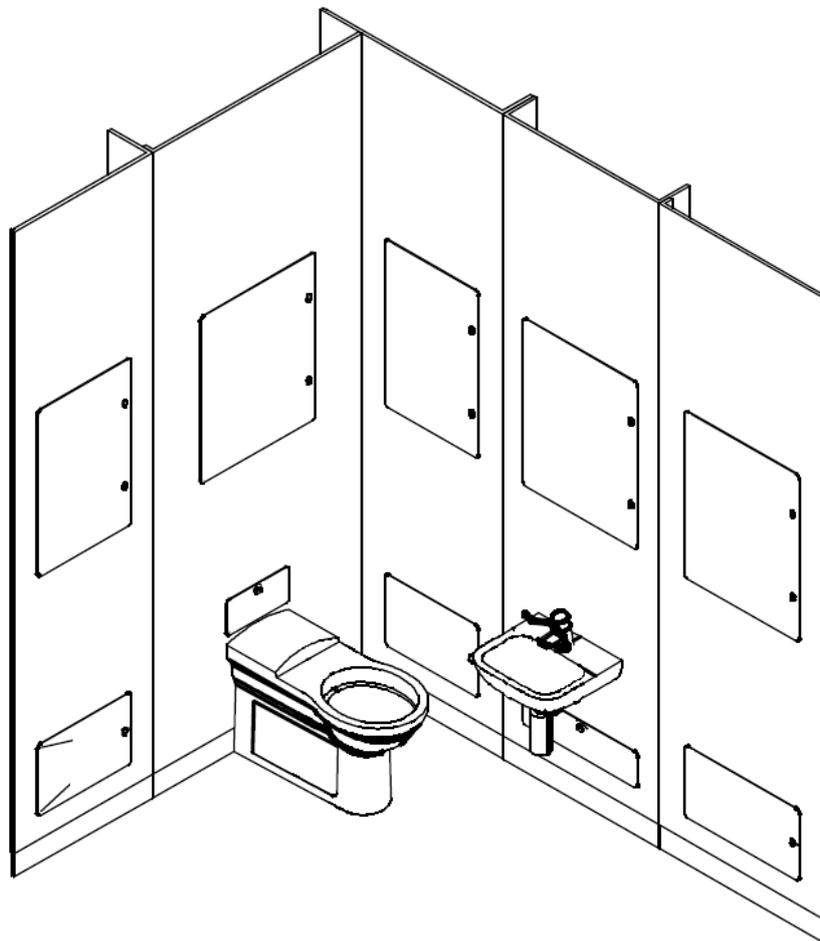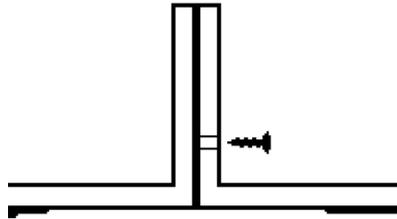

2. If you encounter any difficulty, please contact our Technical Department on 01707 254 170 with the job number and room reference, and one of the team will be pleased to assist.



FOR INFORMATION, ADVICE OR TO PLACE AN ORDER  
CALL US ON

**01707 254 170**

Innova House  
Rash's Green  
Norfolk  
NR19 1JG  
**T** 01707 254 170  
**E** [sales@trovex.com](mailto:sales@trovex.com)  
**W** [trovex.com](http://trovex.com)